

Explosionproof telephone

Ex SafeTel



Operating instructions



Auer Signal

Our explosion-proof, weather-resistant telephone is a captivating product on account of its precision, convenience, long service life and reliability. It is freely programmable and the optimum choice for adverse ambient conditions. Be it seawater, high atmospheric humidity, dust or the toughest mechanical strains, the weather-resistant telephone accomplishes its aim in any conditions. The reason for this is the robust keypad made of stainless steel and an extremely solid housing made of impact-resistant and shockproof cast-moulding material. All of the components utilised are even resistant to leeches and lubricants. The 21-component stainless steel keypad – which can be operated by a user wearing gloves – and the easily readable alphanumeric display as well as the uncomplicated menus all ensure simple operation – thus fulfilling the requirements for a leading-edge and operationally reliable means of communication. As a telephone suitable for connecting to the public telephone network and to private automatic branch exchanges, the ExSafeTel always ensures reliable connections.

ExSafeTel ZB is designed for telephone exchange operation and corresponds to the ExSafeTel, except for keypad and display.

General operating instructions.....	4
Overview of the device	5
Display and keyboard	8
Contents after unpacking.....	9
ZB version notes.....	9
Explosion protection – device description	10
Characteristic data	13
Identification.....	14
Assembly and installation	15
Connection diagram.....	16
Sling holder.....	16
Drilling diagram.....	17
Start-up	18
Maintenance	18
Handset mode	18
Open Listening.....	18
Hands-free talking.....	18
Working with the headset	19
Menu	20
Main Menu	21
Submenu: Telephone Book	22
Submenu: Change Telephone Book	23
Submenu: Lock / PIN.....	24
Submenu: Settings	25
Submenu: Languages.....	26
Default Settings	26
Menu overview.....	27
Technical data	28
Use in marine and offshore segments	31
Service	31
Maintenance and servicing.....	31
Waste disposal	32
Warning and safety instructions	32
Index of catchwords.....	33
CE symbol	34

General operating instructions

1. Both the explosion-proof ExSafeTel telephone and the ZB version are designed for connection to dial ports with analogue connection points.
2. The handset is fitted with a stray-field coil for connecting hearing-aids. People who use hearing-aids which have an inductive receiver can receive the earphone signal directly.
3. The ZB version is not equipped with keypad and display, therefore not all the features are available with this version.
4. The ExSafeTel has a handset module with a dry reed contact as a hook switch. In order to terminate an existing call connection, the handset must be hung up. In order to interrupt an existing call connection, it is sufficient to press the clearing key on the keypad.(see page 8)
5. Use the menu to program the appropriate settings. To access the menu, pick up the handset and press the "YES" key.
6. If you take longer than 2 minutes before you begin making a choice, the power supply of the exchange may be switched off. If that occurs, you will no longer hear a dialling tone. In that case, please replace the handset and wait 2 seconds before picking it up again.
7. When a setting is stored successfully, this is confirmed by an acknowledgement tone.
8. When you receive a call, the ExSafeTel rings at the ringer-volume level selected by you and, for the duration of the calling sound, the symbols (((■))) appears on the display.
9. If you enter a PIN with the menu you can restrict or block dial functions. Forgetting the PIN is the equivalent of losing a key. If you forget the PIN, please contact our technical support.
10. You have a guarantee period of 24 months commencing from the date of purchase. If you have a problem, please contact our technical support service in Austria, located in Vienna:

Phone: 00 43 1 813 82 20

Fax: 00 43 1 815 99 51


E-mail: office@auersignal.com

If a fault occurs which cannot be rectified by telephone, please send the whole telephone along with a copy of the sales receipt to the following address:

Auer Signal GmbH
Perfektastr. 102
A-1230 Wien
Austria


If, on examination of the telephone, it is discovered that a fault is not the case, you will be charged a service fee.

Overview of the device

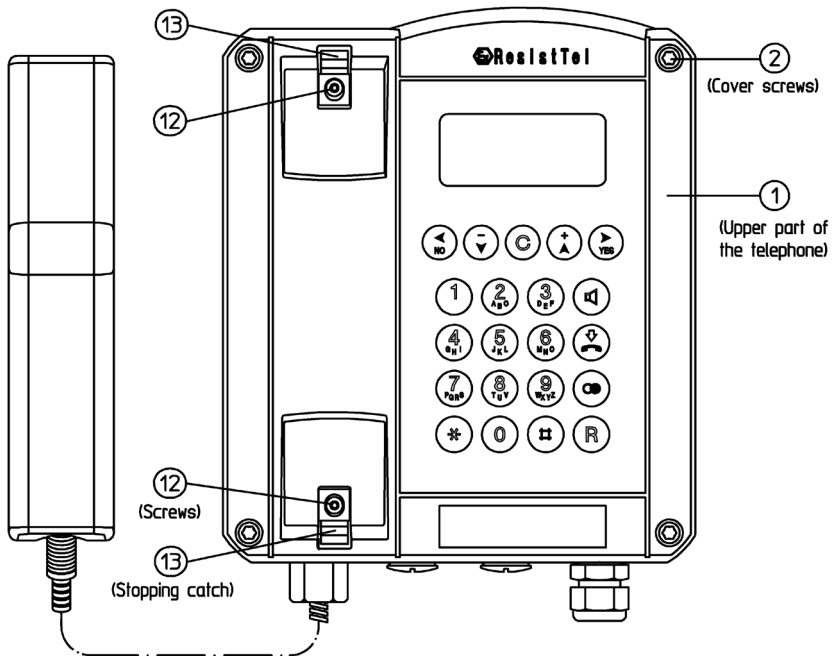


Note: In case of the ZB version, the keypad and display are replaced by a solid metal plate.

Outside view of telephone lower part

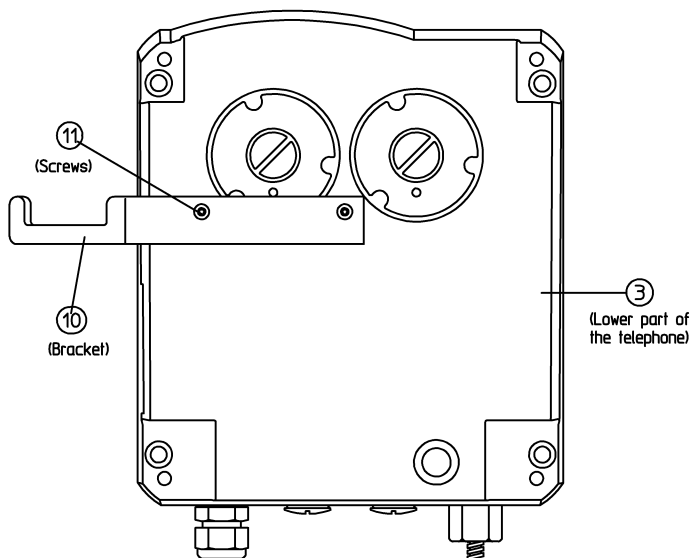

Inside view of telephone upper part

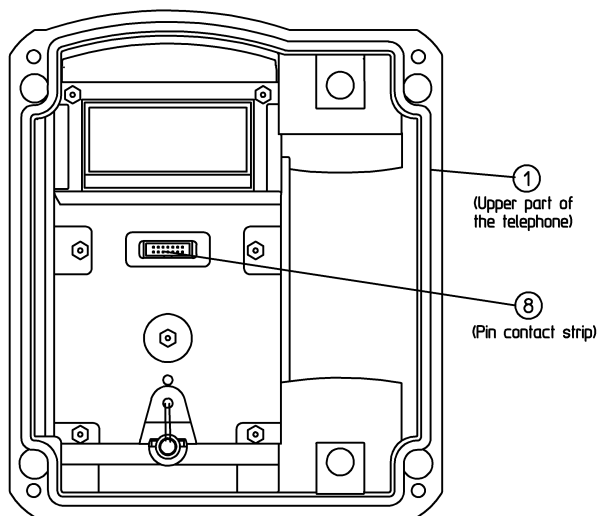


Inside view of telephone lower part

Protection Class II – Components


Factory supplied with: plastic cable entry.

Note: The ZB model does not have a display.

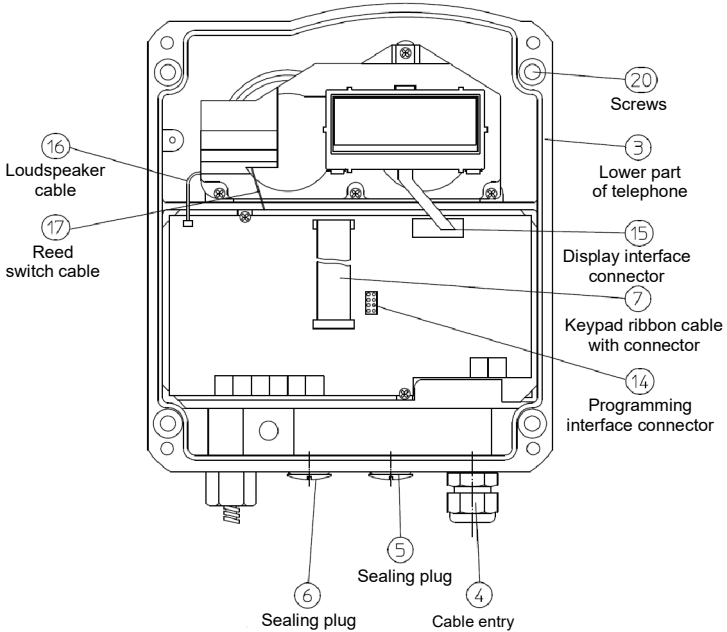


Protection Class I – Components

Factory supplied with: M20x1.5 threaded hole or a 1/2" NPT metal adapter for connecting armoured cables or conduit systems.

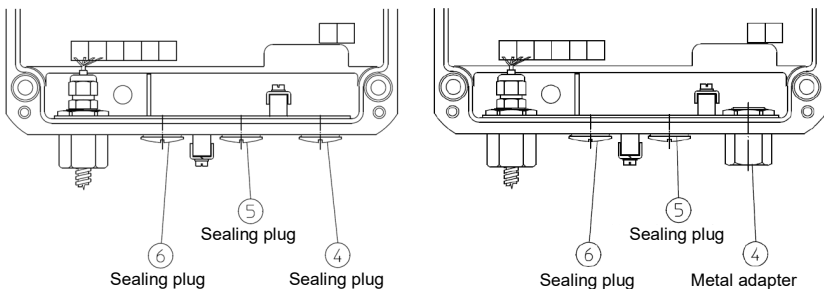

Function keys

Using these keys, you can directly change settings or make durable settings in the menu.

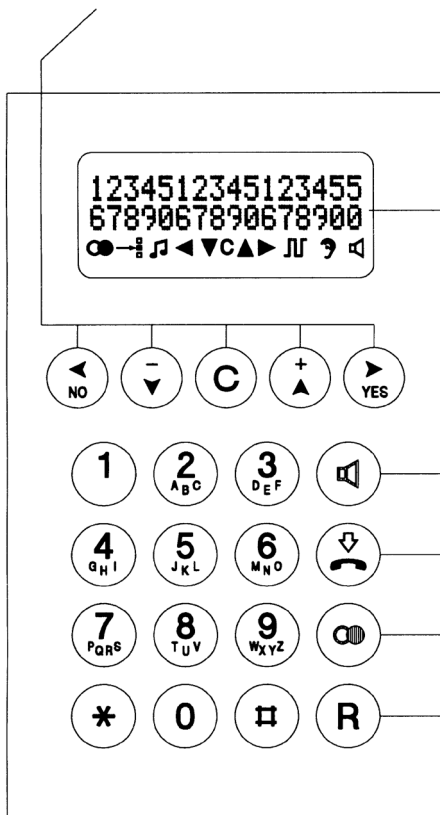

Display

The upper two lines display the call number or the menu settings. The lower line shows appropriate pictograms for the functions.

Switching key

Open listening or hands-free talking

Clearing key

Repeat dialing key

Consultation hold key

Number keys

These keys are used to enter call numbers and texts.

Contents after unpacking

The delivery includes:

- ExSafeTel telephone
- Operating instructions ExSafeTel
- Operating instructions cable entry (optional)
- EU declaration of conformity (ATEX)

ZB version notes

The ExSafeTel / ZB connects – depending on the features of the PABX – with the PABX while lifting the handset. The ExSafeTel / ZB can be called also, because the ringing circuit is built in.

Furthermore there are interfaces for operating an optional second earpiece and an optional secondary ringer.

Thus the ZB version offers the following features:

- Establishing a connection by lifting up the receiver
- Ringing by means of integrated ringing device
- Connection of second earpiece
- Connection of secondary ringer

Regarding the explosion protection the ExSafeTel telephone and the ExSafeTel telephone in ZB version are identical.

The explosion protection enables the user to make and receive calls within hazardous areas of zone 1 and zone 21, in presence of an explosive gas or dust atmosphere.

The ExSafeTel telephone is designed for connection with analogue telephone networks.

The accessories headset, second earpiece and external secondary ringer are not parts of the ExSafeTel telephone, but optional extras.

The housing of the ExSafeTel telephone consists of an electro-statically conductive cast-moulding equipped with a stainless steel keypad. The keypad front plate contains a display sealed by a viewing window. The ZB version comprises no keypad and no display area, but a solid front plate.

The housing consists of a rectangular lower part, in which there has been placed a tray for mounting the electronic parts, as well as a vaulted cover with a keypad.

The cover and the lower part of the housing, divided by a surrounding seal only, are pressed together by four screws. The cover makes up both the non-intrinsically safe and the intrinsically safe electrical enclosure. The electronics circuit board is situated in the tray of the lower part of the housing, completely embedded in a protective compound.

Non-intrinsically safe terminals in increased safety:

Protruding from the compound (see connecting diagram on page 16), a 4-pole increased-safety terminal row is intended for connecting the non-intrinsically safe telephone network (A, B), terminals 13 and 14, as well for connecting an optional, external, explosion-protected secondary ringer (Bell shunt1, Bell shunt), terminals 15 and 16.

Intrinsically safe terminals:

Protruding from the compound (see connecting diagram on page 16), a 12-pole intrinsically safe terminal row is intended for connecting the receiver, which is permanently connected with the telephone housing, terminals 1 to 4, as well as the intrinsically safe accessories, terminals 5 to 10.

The terminals 7 and 8 are intended for the connection of dynamic receiver insets, like the ones used in second earpieces and headsets. This output thus can be used for connecting a second earpiece or a headset, which means that a second earpiece and a headset cannot be connected simultaneously.

Terminal	Note	Use
1	Dynamic receiver inset connection 1	Receiver inset
2	Dynamic receiver inset connection 2	
3	Electret-foil microphone connection (+)	Receiver microphone
4	Electret-foil microphone connection (-)	
5	Electret-foil microphone connection (+)	Headset Microphone, not for ZB version
6	Electret-foil microphone connection (-)	
7	Dynamic receiver inset connection 1	Headset or second earpiece
8	Dynamic receiver inset connection 2	
9	Jumper between the terminals 9 and 10 is identified by the telephone as headset connected.	Headset
10		

To connect accessories, you must replace the blind plugs screwed into the telephone housing by explosion-proof cable glands (M20x1.5).

Before connecting intrinsically safe accessories, and if a system certificate for the intended connection does not exist, the constructor should perform an evaluation of the intrinsic safety according to EN 60079-25.

The technical data for the evaluation of the intrinsic safety can be found in the chapter "Characteristic data".

Further information see EN 60079-14.

A metal bracket is supplied for hanging up the intrinsically safe second earpiece or headset. The metal bracket should be attached to the telephone by means of the two threaded bushes in the floor of the telephone housing. The corresponding bores in the metal bracket can

be used to screw the bracket securely onto to the housing floor (see overview of the device on page 6). Thus, if the constructor wants to use the metal bracket, the first thing he has to do, is to fix it to the housing floor. Subsequently, the device may be mounted on the wall.

Intrinsically safe programming interface

An 8-pole, intrinsically safe contact strip (**14**) (see overview of the device on page 7) protrudes from the compound. This contact strip is exclusively used by the manufacturer for programming purposes. Do not switch any circuits by using the contact strip. The constructor may not perform any kind of programming.

Intrinsically safe display interface

An 8-pole, intrinsically safe contact strip with a soldered-on circuit board (**15**) (see overview of the device on page 7) protrudes from the compound. The circuit board is equipped with a zero power plug for connecting the intrinsically safe LC display film conductor. Connect the built-in display only to this interface.

Intrinsically safe strand connection to the built-in loudspeaker

An intrinsically safe 2-pole strand conductor (**16**) (see overview of the device on page) goes from the compound to the built-in loudspeaker. The strand is soldered onto the circuit board below the compound, as well as onto the loudspeaker.

Intrinsically safe strand connection to the reed switch

An intrinsically safe, 2-pole strand conductor (**17**) goes from the compound to a circuit board with a reed switch (see overview of the device on page 7). On the compound-covered circuit board the strand runs underneath the compound, and on the other circuit board it is soldered onto the reed switch.

Intrinsically safe keypad connection

An intrinsically safe, 14-pole ribbon cable with plug bush (**7**) comes out of the compound. Prior to screwing the device parts together, connect this plug bush with the 14-pole pin contact strip in the housing cover.

Characteristic data

1. Non-intrinsically safe electrical circuits

- 1.1 Telephone network
(Terminals A / B No.: 13 – 14)
- | | | |
|---|---------|----|
| Maximum input voltage U_m (ringing voltage) | AC 90 | V |
| Admissible frequency range | 16...54 | Hz |
- or
- | | | |
|--|-------|----|
| Maximum input voltage U_m (supply voltage) | DC 66 | V |
| Maximum rated input current | 100 | mA |
| Maximum input short circuit current I_k | 35 | A |
- (At the input of this device there is a melting fuse with a breaking capacity of 35 A)
- 1.2 External secondary ringer:
For connection with passive consumers only
(Terminals Bell shunt1 /
Bell shunt No.: 15 –16)
- | | | |
|-------------------------|---------|----|
| Maximum ringing voltage | AC 90 | V |
| Frequency range | 16...54 | Hz |
- or
- | | | |
|------------------------|-------|---|
| Maximum supply voltage | DC 66 | V |
|------------------------|-------|---|

2. Intrinsically safe electrical circuits

- 2.1 Headphones accessory (microphone)
(Terminal pair HSM No.: 5 – 6)
- | | | | |
|------------------------------|-------|-----|----|
| Maximum output voltage | U_o | 17 | V |
| Maximum output current | I_o | 90 | mA |
| Maximum output power | P_o | 80 | mW |
| Maximum external capacitance | C_o | 375 | nF |
| Maximum external inductivity | L_o | 1 | mH |
- 2.2 Headphones accessory (receiver inset) or second earpiece
(Terminal pair HSR No.: 7 – 8)
- | | | | |
|------------------------------|-------|-----|----|
| Maximum output voltage | U_o | 17 | V |
| Maximum output current | I_o | 110 | mA |
| Maximum output power | P_o | 190 | mW |
| Maximum external capacitance | C_o | 375 | nF |
| Maximum external inductivity | L_o | 1.2 | mH |

2.3 Headphones accessory (identification)
(Terminal pair HSS No.: 9 – 10)

Maximum	output voltage	U_o	17	V
Maximum	output current	I_o	8	mA
Maximum	output power	P_o	33	mW
Maximum	external capacitance	C_o	375	nF
Maximum	external inductivity	L_o	100	mH

2.4 All intrinsically safe output electrical circuits have a linear output characteristic curve.


3. Ambient temperature range



$-25^{\circ}\text{C} < T_a < 60^{\circ}\text{C}$ for temperature class T5

$-25^{\circ}\text{C} < T_a < 40^{\circ}\text{C}$ for temperature class T6

Identification

Auer Signal GmbH
Perfektastraße 102, A-1230 Vienna

 II 2G Ex eb mb [ib] IIC T6/T5 Gb
II 2D Ex tb [ib] IIC T80°C/T100°C Db
-25°C < T_a < 40°C/60°C

DMT 03 ATEX E 034

Typ: dST1 A-Nr.: 410010100
F.Nr.: 39749 Prüfg.: 0621/WI
IP66 Um= AC 90 / Um= DC 66V
 Ik 35A

NACH DEM EINSCHALTEN 2MINUTEN WARTEN VOR DEM ÖFFNEN
AFTER DE-ENERGIZING; DELAY 2 MINUTES BEFORE OPENING

Figure Name Plate
Telephone ExSafeTel

Assembly and installation

The device must be installed on a plane surface only, in vertical operating position. Loosen the cover screws **(2)** (see overview of the device on page 5 to 7). and detach the upper part of the telephone **(1)**. If the optional accessory headset or a second earpiece is being employed, attach the bracket **(10)** using two screws **(11)** to the rear panel of the lower part of the telephone. (With the accessories named before, the bracket and screws are in the scope of delivery. With all accessories a cable gland is delivered.) Put four screws, having a head diameter of 10 to 13 mm into the holes **(20)** and attach the lower part of the telephone **(3)** to the wall or to a holder.

Installation differs depending on the type of telephone model. On the telephone with factory equipped plastic cable entry, the telephone network cable should be passed through the cable entry **(4)** and connected to terminals 13 and 14 (A, B) in accordance with the connection diagram.

In case of factory fitted cable glands the attached operating instructions have to be considered.

On the telephone with a sealing plug or a 1/2" NPT metal adapter, the customer is responsible for mounting a cable entry. Follow the manufacturer's operating instructions supplied with the cable entry assembly. Only cable entries with EU type approval for IP66 enclosure protection rating and $-25^{\circ}\text{C} \leq T_a \leq 60^{\circ}\text{C}$ should be used and they should provide a good seal and fit tightly to the cable. If a torque of more than 20 Nm is used to tighten down the sealing rings of the cable entry, then the side of the cable entry assembly nearest the housing should be secured against rotating.

Prior to assembly, check cover seal for tightness.


Using the plug connector **(7)**, plug the ribbon cable onto the pin contact strip **(8)** in the upper part of the housing.

Attach the upper part of the telephone and fasten it to the lower part of the telephone with the four cover screws **(2)**.

The locking torque of the upper part screws is: 1.2 ... 1.5 Nm.

Regarding the assembly and installation please observe the respectively applicable installations regulations.

Connection diagram

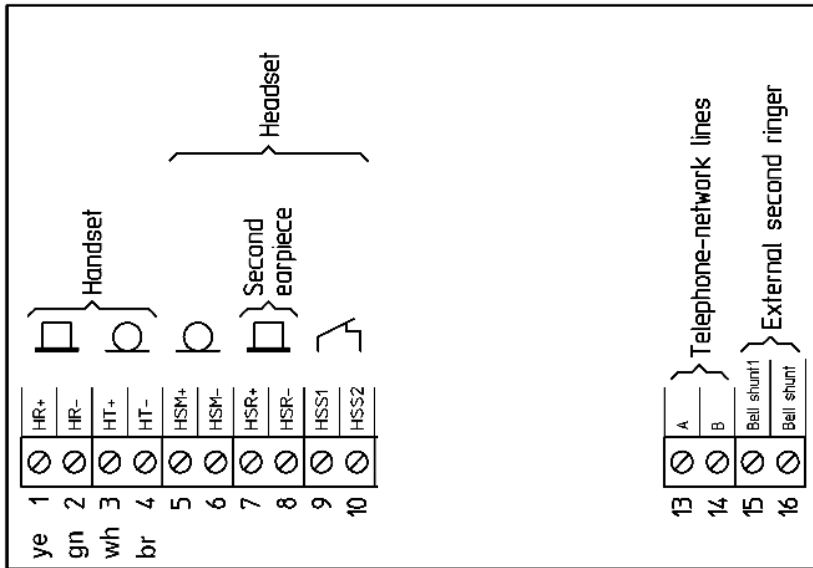


Sling holder

The holding strength for the handset is continuously adjustable. Loosen the screws (12) and move the stopping catches (13). Pushing the stopping catches together increases the holding strength whereas pulling them apart reduces it. Tighten the screws again.

Drilling diagram

For making a drilling template please use the following dimensions (in mm).

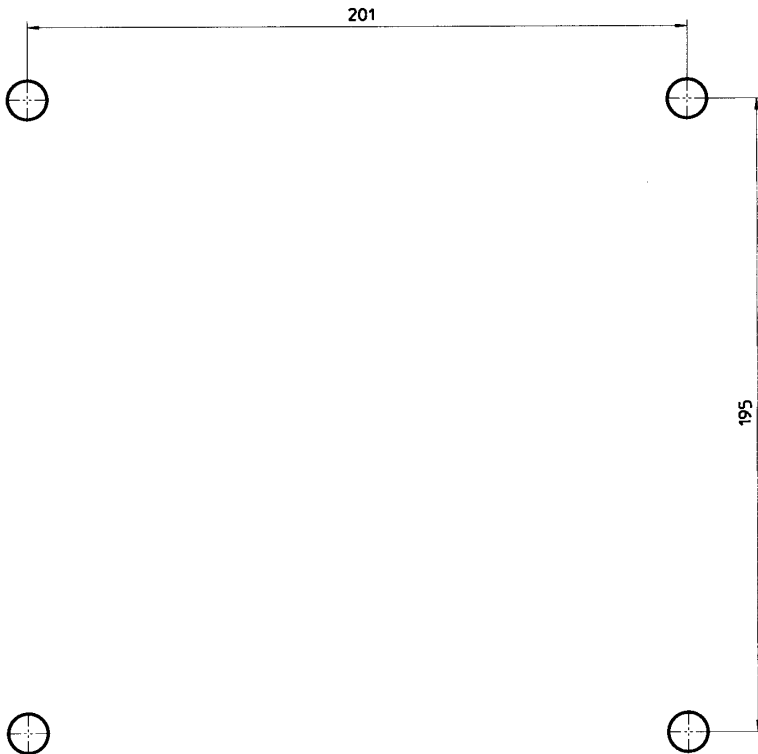

The diameter of the drilled hole is dependent on the screw employed (screw diameter max. 8 mm) and the type of supporting base material (steel, wood, concrete, plasterboard etc.) and must be chosen accordingly.





Start-up

The ExSafeTel telephone is ready for operation as soon as it has been connected to the telephone network.





Maintenance

The ExSafeTel telephone contains no parts that have to be maintained.





Handset mode (except ZB version)

When you pick up the handset, you are in handset mode. Using the keys  and , you can adjust the handset volume for talking. If you wish to durably change the handset volume, use the menu "Settings / Handset volume". Using the key  you can switch into open listening mode. If you keep the key  depressed and replace the handset, you switch to hands-free talking mode.


Open Listening mode (except ZB version)

Using the keys  and , you can adjust the loudspeaker volume for talking. If you wish to change the loudspeaker volume durably, use the menu "Settings / Loudspeaker". The handset volume cannot be changed in open listening mode. Using the key , you can switch to handset mode. If you keep the key  depressed and replace the handset, you switch to hands-free-talking mode.

Hands-free mode (except ZB version)




If you switch on the ExSafeTel using the key  you are in hands-free-talking mode. Using the keys  and  you can adjust the loudspeaker volume for talking. If you wish to durably change the loudspeaker volume, use the menu "Settings / Loudspeaker". You end the call using the key . If you pick up the handset, you switch to handset mode.

Working with the headset (except ZB version)

If the headset has been connected correctly, it takes the place of hands-free talking. For this reason, hands-free talking with the headset is not possible. If you switch on the ResistTel with the key , you are operating in headset mode. If you lift the handset while in headset mode, the handset assumes a higher priority. That means that it is possible to speak and listen using the handset but, in this mode, it is only possible to listen with the headset.


Comparison of the operating states without and with connected headset:

Operation without the headset	Operation with the headset
<u>Handset mode</u>	<u>Handset mode with the headset</u> <ul style="list-style-type: none">- Handset can speak and listen- Headset can only listen- Loudspeaker is off
<u>Open Listening mode</u>	<u>Open Listening with the headset</u> <ul style="list-style-type: none">- Handset can speak and listen- Headset can only listen- Loudspeaker is on
<u>Hands-free mode</u>	<u>Headset mode</u> <ul style="list-style-type: none">- Handset is replaced- Headset can speak and listen- Loudspeaker is off

Using the keys  and  you can adjust the headset volume for talking. If you wish to durably change the headset volume, use the menu "Settings / Headset Volume". You end the call using the key .

Menu (except ZB version)

Starting the menu

Press the key .

You are now situated in the main menu.

The top line of the display indicates the menu in which you are located.


The lower line indicates which menu item is selected.

Selecting menu items

Press the key  or .


The upper line of the display remains unchanged. In the lower line, the menu items available for selection change with each key-press.


Activating a menu item

Press the key .


The menu item which was indicated in the lower line is now located in the upper line. In the lower line, you see the additional options available.

Exiting the menu



Press the key .

With each key-press, you jump to the previous menu. When you arrive back in the main menu, you exit it with the next key-press .

Main Menu (except ZB version)



With the aid of the key  or , you can make selections under the following items:

- Telephone Book For selecting a telephone number from the telephone book memory.
- Change Phonebook For creating new telephone book entries
For modifying existing telephone book entries
For deleting existing telephone book entries
- Lock / PIN For changing to the submenu Direct call
For setting the complete lock
To permit selections from the telephone book only
For disabling or enabling the main menu items “Settings”, “Languages” and “Change Phonebook”
For changing the PIN
- Settings For adjusting the ringer volume and changing the melody
Adjust the loudspeaker volume
Adjust the handset volume
Adjust the headset volume
Adjust the LCD contrast
Set the dialling method
Set the flash time
Set the exchange number and pause
Restoring to the default dettings
Switch on/off an external loudspeaker
Welcome text
- Languages For selecting the menu language German
For selecting the menu language English
For selecting the menu language Spanish
For selecting the menu language French
For selecting the menu language Italian

When you select an item, you can activate it with the key . You can exit the menu with the key .



Submenu – Telephone Book (except ZB version)

You have the option of dialling up to 50 telephone numbers from the telephone book. To store and/or change numbers, see the menu item "Change telephone book".

You can select from the telephone book entries using the key  or .

Examples:



- FIRE BRIGADE 999 dials the telephone number shown on the display
- SECURITY 110 dials the telephone number shown on the display
- CANTEEN 123 dials the telephone number shown on the display
- etc. dials the telephone number shown on the display

When you have selected a telephone number to call, you can dial it by pressing the key . You can exit the menu using the key .



Submenu – Change Telephone Book (except ZB version)

You can store up to 50 telephone numbers and their associated names. Enter the numbers and names in their order of importance because they later appear on the display in the order in which they were entered (e.g. fire brigade before canteen).

Caution: The menu item "Default Settings" deletes all telephone book entries.

With the aid of the key  or , you can make selections under the following items:

- New Entry To make a new entry
- Change Entry To change an entry
- Delete Entry To delete an entry
- Delete All To delete the entire telephone book

When you have selected an item, you can activate it by pressing the key . You can exit the menu using the key .

Submenu – Lock / PIN (except ZB version)

When you call up the menu "Lock / PIN", you are prompted to enter the PIN. The PIN consists of 4 digits. In the state when delivered, the PIN is "0 0 0 0".



If you change the PIN, don't forget the new PIN. Forgetting the PIN is the equivalent of losing a key. If you forget the PIN, please contact our technical support.

Technical support service in in Austria, located in Vienna:



Phone number 0043 1 813 82 20

Fax 0043 1 815 99 51

E-mail office@auersignal.com

When you have entered the PIN, you can make selections under the following items with the aid of the key  or  :

- Direct Call To switch on the direct call
 To enter the direct call number
- Total Lock Locks the telephone preventing all outgoing calls
 Caution: It is also not possible to dial emergency
 telephone numbers
- Directory Only Only permits outgoing calls to numbers contained
 in telephone book
- Settings For disabling or enabling the main menu items
 "Settings", "Languages" and "Change Phonebook"
- Change PIN To change the PIN



When you have selected an item, you can activate it by pressing the key . You can exit the menu using the key .

Note:

When the settings are disabled the main menu items "Settings", "Languages" and "Change Phonebook" are only accessible after entering the PIN.

The menu item "Default Settings" resets all settings except, however, the PIN you may have changed and the language.

Submenu – Settings (except ZB version)

With the aid of the key  or , you can make selections under the following items:

- Ringer
 - For setting the ringer volume
 - For setting the ringer melody
- Speaker Volume
 - For setting the loudspeaker volume
- Handset Volume
 - For setting the handset volume
- Headset Volume
 - For setting the headset volume
- LCD Contrast
 - For setting the display contrast
- Dialling
 - Dialling method DTMF/ duration 90 ms
 - Dialling method Pulse Dial 2:1
 - Dialling method Pulse Dial 1.5:1
 - Dialling method DTMF / duration 70 ms
 - Dialling method DTMF / duration = keypress
- Flash time
 - Set the flash time, 40 ms to 399 ms
- PABX Settings
 - Entry of the exchange number
 - Deletion of the exchange number
 - Setting the dialling pause after the exchange number
- Defaults
 - Reset to the state when delivered
- External Speaker
 - Switch on/off an external loudspeaker
 - Note: in this version without function
- Welcome text
 - input of an individual text, which is indicated in the display after taking off the handset.

For example:

BRANCH 170

EXTERNAL DEPOT



When you have selected an item, you can activate it by pressing the key





. You can exit the menu using the key



Submenu - Languages (except ZB version)

You can make selections under the following items with the aid of the key  or  :

- German For setting the menu language to German
- English For setting the menu language to English
- Spanish For setting the menu language to Spanish
- French For setting the menu language to French
- Italian For setting the menu language to Italian

When you have selected an item, you can activate it by pressing the key . You can exit the menu using the key .

Default Settings

To enable you to use the telephone immediately after connecting it, we have made default settings for general utilisation purposes. Using the menu, you can alter these default values in accordance with your own personal necessities and connection requirements.

Upon delivery of the telephone, the following default values are set:

- Telephone book: deleted
- Repeat dialling: deleted
- Direct call number: deleted
- Exchange number: deleted
- Ringer melody: 0
- Ringer volume: 6 (maximum value)
- Handset volume: 0 (normal value)
- Headset volume: 2
- Loudspeaker volume: 4
- Welcome text Auer Signal
- Dialling method: DTMF, signal duration 90 ms
- Flash time: 80 ms
- LCD contrast: 5 (normal value)
- Pause length after exchange number: 3 seconds
- PIN: 0000

Caution!

Resetting to the default settings via the menu restores these default values with the exception of the PIN and the language:

- The PIN is not changed.
- The language is not changed.

Menu overview (except ZB version)

Main Menu

Telephone Book	
Name #1	Telephone book entry #1 is dialled
To	To
Name #50	Telephone book entry #50 is dialled
Change Telephone Book	
New Entry	Add a new entry to the telephone book
Change Entry	A telephone book entry is changed
Delete Entry	A telephone book entry is deleted
Delete All	The entire telephone book is deleted
Lock / PIN	
Direct Call	
Activate	The direct call is switched on
Change Number	Change or enter the direct call number
Total Lock	The telephone is locked completely
Directory Only	Telephone is locked except for numbers in the telephone book
Settings	The main menu items "Settings", "Languages" and "Change Phonebook" are disabled or enabled.
Change PIN	The PIN is changed (default 0000)
Settings	
Ringer	
Volume	The ringer volume is set
Melody	The ringer melody is set
Speaker Volume	The loudspeaker volume is set durably
Handset Volume	The handset volume is set durably
Headset Volume	The headset volume is set durably
LCD Contrast	The LCD contrast is set
Dialling	
DTMF 90ms	Sets the dialling method to DTMF 90 ms
Pulse Dial 2.0 : 1	Sets the dialling method to PDM 2: 1
Pulse Dial 1.5 : 1	Sets the dialling method to PDM 1.5: 1
DTMF 70ms	Sets the dialling method to DTMF 70 ms
DTMF	Sets the dialling method to DTMF unlimited
Flash Time	Set the flash time to between 40 and 399 ms
PABX Settings	
Enter Exchange Code	Entry of an exchange number
Clear Exchange Code	The exchange number is deleted
Pause Exchange Code	Set dialling pause to between 1 and 6 s
Defaults	Resets to the state when delivered and the telephone book is deleted
Ext. Speaker	Switch on/off external loudspeaker
Welcome text	change
Languages	
German	Menu language German is activated
English	Menu language English is activated
Spanish	Menu language Spanish is activated
French	Menu language French is activated
Italian	Menu language Italian is activated

Technical data


Warning!

In order to maintain the explosion protection it is of paramount importance to observe the information given in the chapter “Explosion protection – characteristic data” on pages 13 and 14.

Note:

Except for ZB version for items marked with an asterisk *).

Connection data	
Supply voltage	24 V _{DC} to 66 V _{DC}
Supply current	15 mA _{DC} to 100 mA _{DC}
Ringer voltage	24 V _{AC} to 90 V _{AC} (calling frequency 21...54 Hz) 30 V _{AC} to 90 V _{AC} (calling frequency 16.6...54 Hz)
Ringer impedance	Greater than 6.0 kΩ at 25 Hz and 24...90 V _{AC} . Greater than 4.0 kΩ at 50 Hz and 24...90 V _{AC} .
Consultation hold key *)	Flash function adjustable from 40 ms to 399 ms via the menu.
Dialling method *)	PD or DTMF mode can be set via the menu. DTMF mode in accordance with ITU-T recommendation Q.23. Pulse Dial mode with pulse pause ratio 1.5:1 or 2:1 (adjustable via the menu).
Exchange number*)	An exchange number and dialling pause are programmable to between 1 s and 6 s via the menu.
Bell-Shunt	Possibility for connecting a second external ringer.
Headset *)	Terminals for the connection of a headset (optional accessory). Note: A headset or a second earpiece can be connected, but not both simultaneously !
Second earpiece	Terminals for the connection of a second earpiece (optional accessory). Note: A headset or a second earpiece can be connected, but not both simultaneously !
Connection terminals	Up to 4 mm ² inflexible. Up to 2.5 mm ² flexible.
Housing	
Material	Glass-fibre-reinforced polyester
Height x width x depth	approx. 260 mm x 228 mm x 135 mm
Weight	approx. 5.5 kg
Display *)	2-line alphanumeric display with pictograms. Field of view approx. 78 mm x 26 mm.

Keyboard *)	- Metal keyboard with protection against ice. - 21 keys with ABC inscription for name entries.
Position of operation	Mounted upright on the wall. The device must be mounted on a plane surface only.
Protection Class I	M20 x 1.5 sealing plug or threaded 1/2" NPT adapter for cable entry assembly.
Protection Class II	Plastic cable entry
Handset	
Sling protection	Integrated, adjustable sling protection.
Handset cord	Steel-reinforced steel-clad cord.
Earphone	Dynamic capsule with stray-field coil for the inductive connection of hearing-aids.
Microphone capsule	Electret microphone
Noise suppression	Greater than 3 dB by integrated speak-in horn.
Ambient conditions	
Protection type:	IP 66 as per EN60529
Protection against external mechanical impacts	IK 09 as per EN50102
Operating temperature:	-25°C to +60°C (display does not operate below -20°C)
Storage temperature:	-25°C to +70°C as per IEC60721
Additional features	
Clearing key *)	Separate key
Hook switch	Dry reed contact without a mechanical cradle
Power supply	- from the analogue telephone network. - no additional mains supply required.
Meter-pulse lock	- Electrical attenuation for 12 kHz and 16 kHz on the earphone greater than 30 dB with respect to 1 kHz. - Impedance (telephone connections A, B): approx. 13 kΩ (1 V _{eff} ; 12 kHz ; idle state) approx. 4 kΩ (10 V _{eff} ; 12 kHz ; idle state) approx. 2.5 kΩ (1 V _{eff} ; 12 kHz ; during a call) approx. 2.3 kΩ (10 V _{eff} ; 12 kHz ; during a call) approx. 11 kΩ (1 V _{eff} ; 16 kHz ; idle state) approx. 4 kΩ (10 V _{eff} ; 16 kHz ; idle state) approx. 2.5 kΩ (1 V _{eff} ; 16 kHz ; during a call) approx. 2.3 kΩ (10 V _{eff} ; 16 kHz ; during a call)
Optical call *) signalling	Display indicates ((()))

Ringer volume	<ul style="list-style-type: none"> - Approx. 90dB(A) at a distance of 1 m at 50 V_{AC} / 50 Hz (In the default settings. The maximum volume is also dependent on the selected melody and on the power-supply conditions). - 6-step volume and mute mode can be set via the menu. (The ringer volume is reduced by approx. 12 dB(A) if the optional external loudspeaker is switched on in the menu).
Ringer melodies *)	10 melodies can be selected via the menu.
Open Listening	<ul style="list-style-type: none"> - Maximum volume approx. 68 dB(A) at a distance of 1 m - 7-step volume can be set via the menu. *) - Durable setting via the menu *) (The internal loudspeaker volume is reduced if the optional external loudspeaker is switched on in the menu).
Hands-free *)	<ul style="list-style-type: none"> - Function possible where ambient noise do not exceed 68 dB(A). (at greater noise levels, it is not possible to understand the telephone conversation in hands-free mode). - Maximum loudspeaker volume approx. 68 dB(A) at a distance of 1 m - 7-step volume can be set via the menu. - Durable setting via the menu (The open listening volume is reduced if the optional external loudspeaker is switched on in the menu).
Handset loud function *)	<ul style="list-style-type: none"> - Handset volume from 0 dB to +12 dB. - 7-step volume can be set via the menu. - Durable setting via the menu.
Menus *)	<ul style="list-style-type: none"> - In German, English, Spanish, French and Italian. - An audible signal is given if programming was successful.
Telephone book *)	- A maximum of 50 entries with name and telephone number.

Service

You have purchased a state-of-the-art product manufactured by **Auer Signal** and subject to stringent quality controls. If you have questions regarding the telephone or if a malfunction has occurred – even after the guarantee period – please contact **Auer Signal** (see page 4). Please have the type and article number ready (these numbers can be found on the type plate) when you contact us.

Maintenance and servicing

The telephone is maintenance-free. Nevertheless, if the telephone is deployed in areas with significant impurities due to dust, grease, oil etc., then it should be cleaned from time to time. The handset and the telephone should be wiped with a damp cleaning cloth. **Caution!** Never use sharp objects for cleaning.

Waste disposal

The device may be completely recycled as electronic waste. Upon disassembling the device, the plastic, metal and electronic components must be disposed of separately.

In every single case the national requirements and regulations for waste disposal must be observed.

The waste-disposal requirements of your country must be observed.

Warning and safety instructions

This equipment is an explosion-proof and weather-resistant telephone specifically designed for operation in a harsh industrial environment. The following warning and safety instructions must be heeded:

1. Do not connect or operate the telephone with voltages other than the voltages specified. Make sure the PE wiring is connected properly on the Protection Class I model. All cabling should be routed such that it does not present a tripping hazard.
2. The telephone must only be operated under the specified ambient conditions (see section "Technical data"). Adverse ambient conditions, such as e.g. ambient temperatures which are too high or too low, are not permissible because this promotes the failure of electronic components.
3. It must be ensured that the telephone, the connection wire etc. are not damaged. It is not permissible to operate the telephone in a damaged state.
4. The circuits of the telephone must not be earthed.
5. When operating the telephone, please heed the legal and commercial / industrial regulations, accident-prevention regulations and electrical regulations / provisions.
6. Repairs are only permissible with original spare parts which must be replaced by a specialist. Other replacement parts can cause damage and render the guarantee invalid.
7. The stipulated position of utilisation must be adhered to. The telephone must be installed on a plane surface only, in vertical operating position.

8. Magnetic fields with energy technical frequencies can cause a slight impairment of the listening quality. If this is the case, please ensure that the telephone is installed at a suitable location.
9. The telephone must be switched off before opening. Wait at least 2 minutes after switching off power before opening the telephone!
10. In the open state of the telephone no dust may ingress the device.
11. Upon mounting or demounting the device, do not damage the cover seal, which keeps the cover tight, or the collar on the lower part of the housing.
12. Upon repairing the apparatus for use in dust, the repaired parts should once again be subjected to a routine test.
13. The mouthpiece horn of the receiver consists of a non-conductive plastic material. It may become dangerously charged at high air speeds. Consequently, cleaning the mouthpiece horn with pressurized air is prohibited.
14. If there is a high concentration of sulphurous gases in the environment, the lettering of the keys can fade and a rust film can arise.
15. Changes to the product which are in the interests of technical progress are possible even without prior notice.

CE symbol

We hereby declare this product is in compliance with the Essential Health and Safety Requirements of ATEX Directive 2014/34/EU, EMC Directive 2014/30/EU, Low Voltage Directive 2014/35/EU and RoHS Directive 2011/65/EU.

The appropriate standards, technical regulations und specifications you can take from the attached conformity declaration and the conformity declarations on our Website.

Subject to alterations or errors



Auer Signal

Phone: +43 1 813 82 20 · Fax: + 43 1 815 99 51
Mail: office@auersignal.com
<http://www.auersignal.com>
Auer Signal GmbH
Perfektastr. 102
A-1230 Wien